


Dehumidifying plasters with a single product

LV45_SA_EN_R2-0517

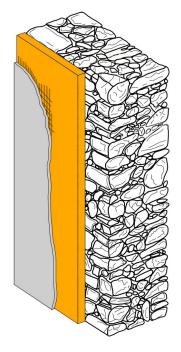

APPLICATION DATA SHEET

Creation of dehumidifying plasters with a single product through:

- 1. preparation of the substrate;
- 2. laying of a rough coating;
- 3. laying of the plaster;
- 4. skimming;
- 5. possible final varnishes.

1) PREPARATION OF THE SUBSTRATE

In case of preliminary creation of chemical barrage, wait about 7 days before proceeding to remove any plaster up to the highest point where the rising damp is still visible, increased by twice the thickness of the wall, and thorough clean the surface with total elimination of dust, grease, old friable paints, inconsistent parts.

Skiving of friable mortar joints and grouting of the same with ready-to-use natural-hydraulic-lime-based masonry mortars.

Clean the surface thoroughly to eliminate any flumsy parts (for example any damaged rendering mortar between the hewn stones), grease, old paint and any other materials that might affect proper anchoring during applications. Brush the masonry and clean it with a pressure washer

until saturated: the substrate must be soaked with water but dry on the surface when the first layer of desalinating rough coating is applied.

2) LAYING OF A ROUGH COATING

Apply with suitable manual or mechanical equipment a first layer of dehumidifying salts-accumulator ready to use mortar **Tectoria MONO**, distributing it evenly over the entire surface to be treated, respecting the consumption rate indicated in the Technical Data Sheet.

3) LAYING OF THE PLASTER

Wait 24 hours (at 20°C) before applying the next coat of dehumidifying salts-accumulator ready to use mortar **Tectoria MONO**, which must be applied after damping down the surface of the rough coat, with a plastering machine or a trowel. The plaster should be at least 2 cm thick.

4) SKIMMING

The subsequent skimming should be made with lime-based mortar **Limepor FN** and carried out after the plaster is fully cured (minimum 4 weeks), so as to seal off any shrinkage lesions that can be generated especially in the case of plasters of large thickness.

In the case of extremely thick and non-homogeneous or weak substrates, it is advisable to insert in the chosen finish suitable reinforcement skimming mesh **Kimitech 350**.

POSSIBLE ALTERNATIVES

As an alternative to **Limepor FN**, with maximum granulometry of 1 mm, the skimming can be carried out through the application of **Limepor EDO** with maximum granulometry of 0,6 mm or **Limepor SK** with < 1 mm granulometry.

5) POSSIBLE FINAL VARNISHES

Any final varnishes should be applied after the surface is fully dry and by using vapor permeable products.