


Dehumidifying plasters with the use of more than one product

LV46_SA_EN_R3-0919

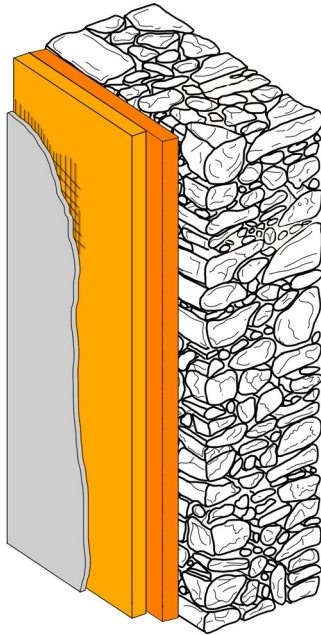

APPLICATION DATA SHEET

Creation of dehumidifying plasters with the use of more than one product by:

1. preparation of the substrate;
2. laying of a rough coating;
3. laying of the plaster;
4. skimming;
5. possible final varnishes.

1) PREPARATION OF THE SUBSTRATE

In case of preliminary creation of chemical barrage, wait about 7 days before proceeding to remove any plaster up to the highest point where the rising damp is still visible, increased by twice the thickness of the wall, and thorough clean the surface with total elimination of dust, grease, old friable paints, inconsistent parts.

Skiving of friable mortar joints and subsequent grouting of the same with ready-to-use masonry mortars based on natural hydraulic lime.

Clean the surface thoroughly to eliminate any flaking parts (for example any damaged rendering mortar between the hewn stones), grease, old paint and any other materials that might affect proper anchoring during applications.

Brush the masonry and clean it with a pressure washer until saturated: the substrate must be soaked with water

but dry on the surface when the first layer of desalinating rough coating is applied.

2) LAYING OF A ROUGH COATING

Apply with a trowel the anti-saline rough coating **Tectoria RZ**, distributing it evenly over the entire surface to be treated, respecting the consumption rate indicated in the Technical Data Sheet. If some areas of the masonry, after 1-2 days, still have leaks of salts and / or very wet areas, spread a further layer of anti-saline rough coating.

3) LAYING OF THE PLASTER

Wait 1-2 days (at 20°C) before damping down the surface, then wait until it is dry and proceed with the application of anti-saline rough coating **Tectoria RZ**, in order to create a preliminary adhesive layer. While still fresh, apply with a plastering machine or a trowel the dehumidifying macro-porous lime-based ready-to-use mortar **Tectoria DF**. The plaster should be at least 2 cm thick.

4) SKIMMING

The subsequent skimming should be made with lime-based mortar **Limepor FN** and carried out after the plaster is fully cured (minimum 4 weeks), so as to seal off any shrinkage lesions that can be generated especially in the case of plasters of large thickness.

In the case of extremely thick and non-homogeneous or weak substrates, it is advisable to insert in the chosen finish suitable reinforcement skimming mesh **Kimitech 350**.

POSSIBLE ALTERNATIVES

As an alternative to **Limepor FN**, with maximum granulometry of 1 mm, the skimming can be carried out through the application of **Limepor EDO** with maximum granulometry of 0,6 mm or **Limepor SK** with < 1 mm granulometry.

5) POSSIBLE FINAL VARNISHES

Any final varnishes should be applied after the surface is fully dry and by using vapor permeable products.